

## CDTV Remote Control Key Assignment for Chameleon 64:

Infrared CDTV Remote Key	C64 Function
1	F1
2	RShift + F1
3	F3
4	RShift + F3
5	F5
6	RShift + F5
7	F7
8	RShift + F7
9	RUN/STOP
0	Spacebar
ESCAPE	Left Arrow
ENTER	RETURN
REW	CRSR Left (RShift + CRSR Right)
PLAY/PAUSE	CRSR Up (RShift + CRSR Down)
FF	CRSR Right
STOP	CRSR Down
GENLOCK	Left Push Button (used to be the menu button, now it's „press and hold the freeze button longer than 0.7 secs.“)
CD/TV	Middle Push Button (Freeze)
POWER	Right Push Button (Reset)
Vol Up	+
Vol Down	-
M/J Switch in MOUSE Position	Joystick 1
M/J Switch in JOY Position	Joystick 2
A	Fire
B	Auto Fire (8 Hz)